


# Type 160 Cross Sectional and Part Description

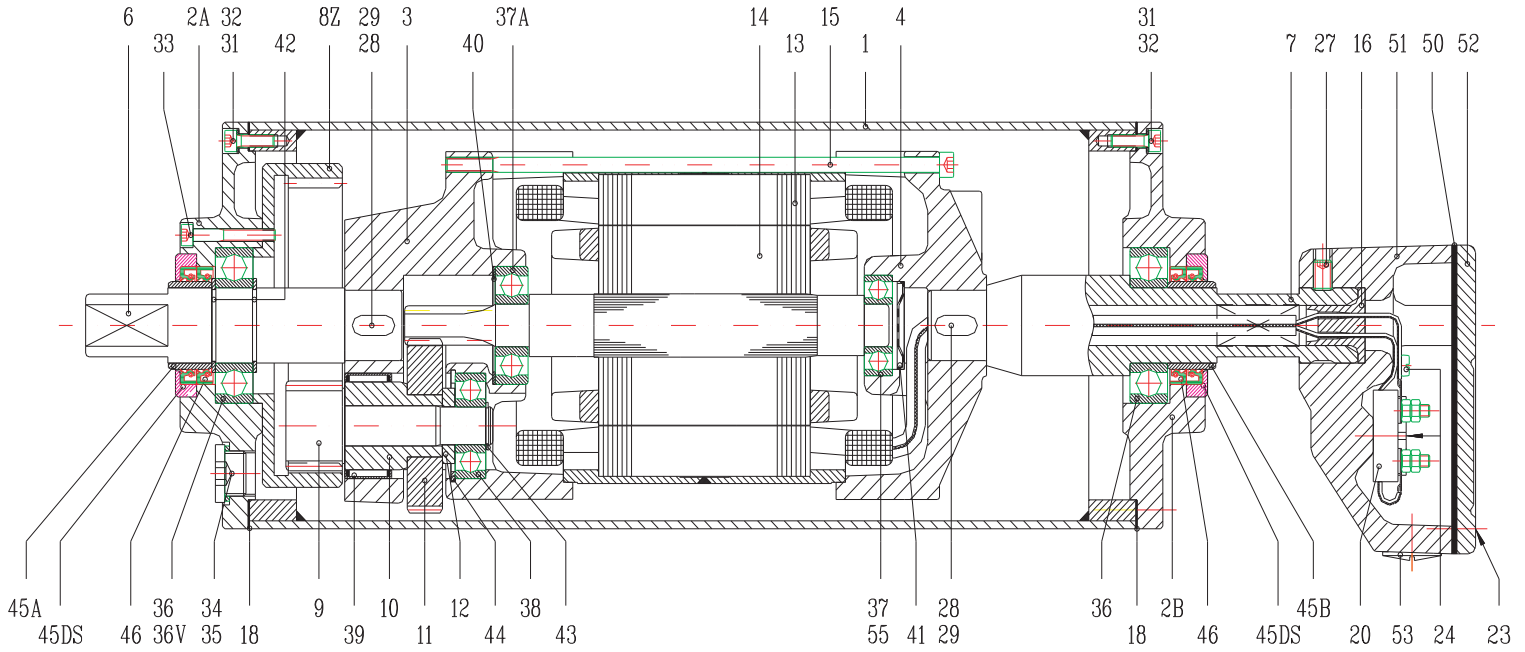

Position No.	Part Description	Position No.	Part Description
1	Shell	33	Socket Head Cap Screw
2A	End Flange	34	Filler Plug
2B	End Flange	35	Washer
3	Gear Housing	36	Ball Bearing
4	Motor Flange	36V	Cylindrical Bearing
6	Shaft End	37	Ball Bearing
7	Hollow Shaft	37A	Ball Bearing
8Z	Internal Gear	38	Ball Bearing
9/10	Pinion with Bushing	39	Needle Bearing
11	Gear	40	Shim
12	Distance Ring	41	Locking Disc
13	Stator	42	Snap Ring
14	Rotor	43	Snap Ring
15	Socket Head Cap Screw	44	Snap Ring
16	Cable Passage	45A	Bearing Race
18	Gasket	45B	Bearing Race
20	Terminal Board	45DS	Double Seal Adaptor
23	Fillister Head Machine Screw	46	Oil Seal
24	Fillister Head Machine Screw	50	Seal
27	Set Screw	51	Junction Box
28	Set Screw	52	Junction Box Cover
29	Key	53	Plug
31	Socket Head Cap Screw	55	Backstop Bearing
32	Washer Copper	57	Name Plate