


Type 500A75 Cross Sectional and Part Description

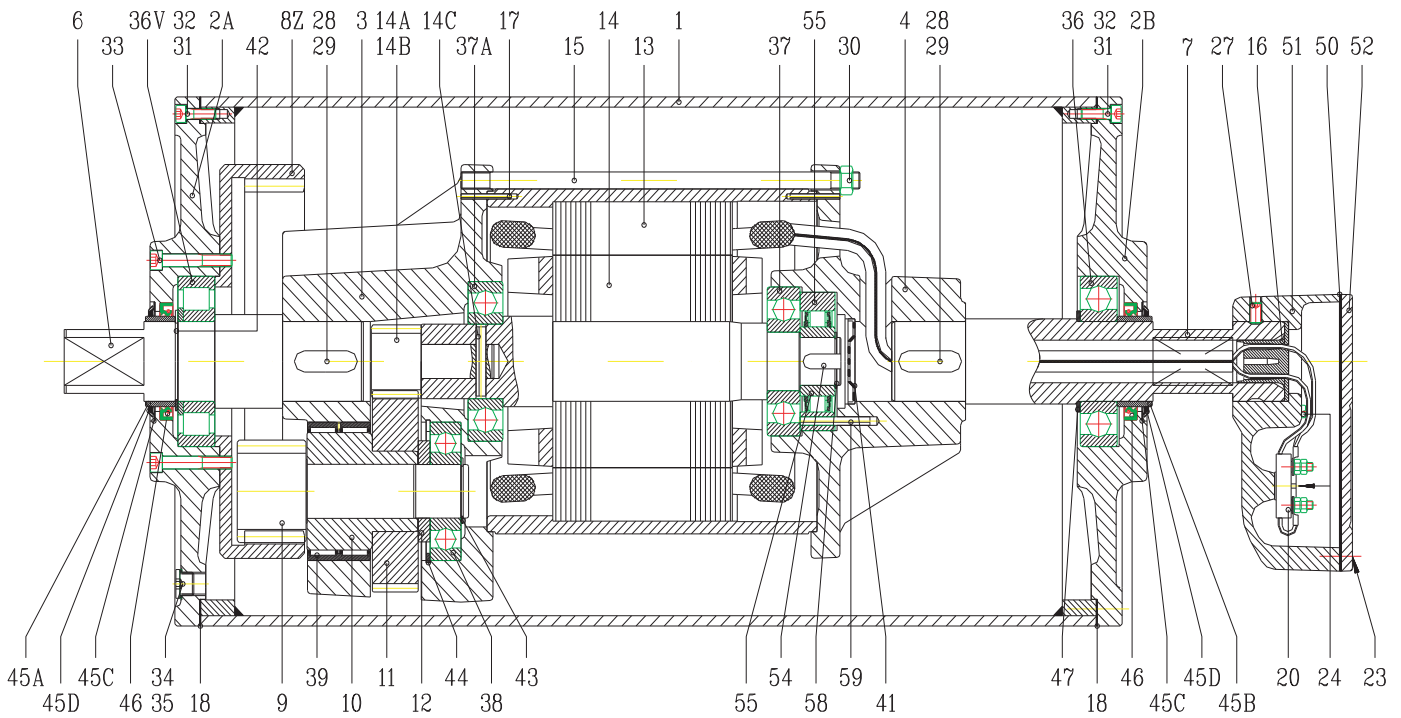

Position No.	Part Description	Position No.	Part Description
1	Shell	33	Socket Head Cap Screw
2A	End Flange	34	Filler Plug
2B	End Flange	35	Washer
3	Gear Housing	36	Ball Bearing
4	Motor Flange	36V	Cylindrical Bearing
6	Shaft End	37	Ball Bearing
7	Hollow Shaft	37A	Ball Bearing
8Z	Internal Gear	38	Ball Bearing
9/10	Pinion with Bushing	39	Needle Bearing
11	Gear	41	Locking Disc
12	Distance Ring	42	Snap Ring
13	Stator	43	Snap Ring
14	Rotor	44	Snap Ring
14A/B	Insert Pinion	45A	Bearing Race
14C	Spiral Pin	45B	Bearing Race
15	Threaded Rod	45C	Shim Plated
16	Cable Passage	45D	Gamma Ring
17	Spiral Pin	46	Oil Seal
18	Gasket	47	Shim
20	Terminal Board	50	Seal
23	Fillister Head Machine Screw	51	Junction Box
24	Fillister Head Machine Screw	52	Junction Box Cover
27	Set Screw	53	Blind Stop
28	Set Screw	54	Key
29	Key	55	Backstop Bearing
30	Nut	57	Name Plate
31	Socket Head Cap Screw	58	Snap Ring
32	Washer Copper	59	Spiral Pin